


North American Specification Volkswagen Golf 3

USA/Canada to European Specification Taillight / Rear Foglight Conversion

From the instructions written by Nicola De Zanche: http://www.bme.med.ualberta.ca/~nicola/rear_fogs.html
 Technical drawing by Rob Thomas: <http://cabrios.20m.com/>, domozitolk@earthlink.net

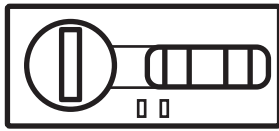

NOTE: socket #12 usually has no wiring connected to it and will probably require an AMP connector which can be found in VW part number 000-979-133 (formerly part # 000-979-129-A). This has connectors at both ends of a short wire so it can be cut in half, one can be used for the headlight switch end and the other in T5d/1 which also usually has no wiring connected. The others can either be pulled and rerouted or spliced.

